



3X-KZPEA Release Notes

March, 2005

EK-KZPEA-RN. E01

KZPEA-DB Ultra 160 64-Bit PCI-SCSI Dual Channel Storage Adapter Module

Be sure to read these notes and the provided User Guide before installing the KZPEA-DB Ultra 160 SCSI Storage Adapter Module into your AlphaServer.

***Note:** Please refer to the latest version of these release notes, which can be found on the KZPEA Web Page. The KZPEA web page can be accessed by clicking on the appropriate link on the HP AlphaServer storage options page at the following URL:*

<http://h18002.www1.hp.com/alphaserver/products/storage/index.html>

The KZPEA-DB Ultra 160 SCSI Storage Adapter is a very high performance PCI option module that connects devices attached to its two 16-bit Ultra3 160MB/s LVD/SE SCSI ports to a PCI based host AlphaServer system. The module supports both 32 and 64 bit PCI slots.

***Note:** The KZPEA supports SCSI bus speeds up to Ultra3 160MB/sec when using LVD signaling (requiring multi-mode or LVD only terminators on the bus). The fastest the adapter can run in SE mode is UltraSCSI speeds.*

This document describes any known issues or restrictions when using the KZPEA-DB Ultra 160 SCSI Storage Adapter within your system configuration. This document contains four sections:

- Parts List for the KZPEA-DB
- Supported HP Systems
- Restrictions and Notes
- Shared Bus Support

KZPEA-DB Parts List

<u>Part Number</u>	<u>Description</u>
30-56150-03	PCB, PCI, 64bit/66MHz, U3 SCSI adapter module
EK-KZPEA-UG	KZPEA User's Guide
EK-KZPEA-RN	Adapter release notes, this document
3R-Q00LA-3V	HP options warranty

Supported HP Systems

The KZPEA-DB is supported on the following AlphaServer systems with the minimum required operating system and SRM console revisions:

Note: Please refer to release notes on the KZPEA Web page for the latest information on supported platforms that may be added after this release.

Tru64 UNIX Non-Shared Bus

Supported AlphaServer System	Number of Adapters Supported	Minimum Revision Operating System Required	Minimum Revision SRM Console Required
XP900	1	V5.1 with Patch Kit 3 ¹	V5.8
XP1000	1	V5.1 with Patch Kit 3 ¹	V5.8
DS10	1	V5.1 with Patch Kit 3 ¹	V5.8
DS10L	1	V5.1 with Patch Kit 3 ¹	V5.8
DS15	2	V5.1A with NHD7	V6.6
DS20E	4	V5.1A	V6.0
DS20L	1	V5.1A with Patch Kit 4 ²	V6.0
DS25	4	V5.1A with Patch Kit 4 ²	V6.0
ES40	4	V5.1A	V6.0
ES45	6	V5.1A	V6.0
GS80 ³	4	V5.1A with Patch Kit 4 ²	V6.3
GS160	4	V5.1A with Patch Kit 4 ²	V6.3
GS320	4	V5.1A with Patch Kit 4 ²	V6.3
ES47 Tower	24	V5.1B with Patch Kit 1	V6.5
ES47 ⁴	24	V5.1B with Patch Kit 1	V6.5
ES80 ⁵	24	V5.1B with Patch Kit 1	V6.5
GS1280	32	V5.1B with Patch Kit 1	V6.5

Tru64 UNIX Shared Bus

Supported AlphaServer System	Number of Adapters Supported	Minimum Revision Operating System Required	Minimum Revision SRM Console Required
DS10	1	V5.1A with Patch Kit 4 ²	V6.3
DS15	2	V5.1A with NHD7	V6.6
DS20E	4	V5.1A with Patch Kit 4 ²	V6.3
DS25	4	V5.1A with Patch Kit 4 ²	V6.3
ES40	4	V5.1A with Patch Kit 4 ²	V6.3
ES45	6	V5.1A with Patch Kit 4 ²	V6.3

(continued...)

¹ The full name of the V5.1 Patch Kit 3 is T64V51AS0003-20010521.tar

² The full name of the V5.1A Patch Kit 4 is T64V51AB21AS0004-20030206.tar

³ See Restrictions and Notes section for use of drives having Arbitration Fairness only.

⁴ ES47 internal I/O 4 max per SBB; external I/O 8 max per PCI Drawer; ES47 M2 with external I/O 24 max

⁵ ES80 internal I/O 4 max per SBB; external I/O 8 max per PCI Drawer; ES80 M8 with external I/O – 24 max

Tru64 UNIX Shared Bus (continued)

ES47	6	V5.1B with Patch Kit 1	V6.5
ES80	6	V5.1B with Patch Kit 1	V6.5
GS1280	6	V5.1B with Patch Kit 1	V6.5

OpenVMS⁶

Supported AlphaServer System	Number of Adapters Supported	Minimum Revision Operating System Required⁷	Minimum Revision SRM Console Required
XP900	1	V7.2-2, V7.3	V6.0
XP1000	1	V7.2-2, V7.3	V6.0
DS10	1	V7.2-2, V7.3	V6.0
DS10L	1	V7.2-2, V7.3	V6.0
DS15	2	V7.3-1	V6.6
DS20E	4	V7.2-2, V7.3	V6.0
DS25	4	V7.2-2, V7.3	V6.0
ES40	4	V7.2-2, V7.3	V6.0
ES45	6	V7.2-2, V7.3	V6.0
GS80	4	V7.2-2, V7.3	V6.1
GS160	4	V7.2-2, V7.3	V6.1
GS320	4	V7.2-2, V7.3	V6.1
ES47 Tower	4	V7.3-1	V6.5
ES47	12	V7.3-1	V6.5
ES80	12	V7.3-1	V6.5
GS1280	12	V7.3-1	V6.5

System and Operating System Notes:

- The minimum Tru64 UNIX Version 5.1A driver is version 2.269B, chim 360, except for shared SCSI bus configurations.
- For shared SCSI bus configurations, the minimum Tru64 UNIX Version 5.1A driver is version 2.273, chim 364A3, via Patch Kit 4.
- HP strongly recommends that installations include the latest TIMA kits for the OpenVMS version in use. At the time of this publication, the TIMA kits for the KZPEA are:

DEC-AXPVMS-VMS722_FIBRE_SCSI-V0200--4.PCSI, for OpenVMS 7.2-2

DEC-AXPVMS-VMS73_FIBRE_SCSI-V0400--4.PCSI, for OpenVMS 7.3

DEC-AXPVMS-VMS731_FIBRE_SCSI-V0100--4.PCSI, for OpenVMS 7.3-1

For ES47, ES80 and GS1280:

DEC-AXPVMS-VMS731-EV7-V0100

The latest TIMA kits can be obtained from the following FTP site:

<http://ftp1.support.compaq.com/public/vms/axp/>

- ES40 support is only with EV68 systems. There is no ES40 support for EV6 or EV67 systems.
- DS20E systems must have one of the following specific part numbers:
DA-56PAB-DA/EA/FA/DW/EW/FW DY-56PAB-DA/EA/FA/DW/EW/FW
DA-56RAA-DA/EA/FA/DW/EW/FW DY-56RAA-DA/EA/FA/DW/EW/FW

⁶ Open VMS does not support Shared SCSI bus configuration for the KZPEA.

⁷ Refer to the following "System and Operating System Notes" for TIMA kit information.

Restrictions and Notes

StorageWorks Components

1. The following table lists the only currently supported universal device enclosures:

Component	Alias P/N	Description
DS-SSL14-RS	138151-001	SW ENC 4254 US
DS-SL13R-AA	190209-001	StrgWrks 4314 Rackable JBOD US
DS-SL13R-AB	190209-B31	StrgWrks 4314 Rackable JBOD INTL
DS-SL13R-AJ	190209-291	StrgWrks 4314 Rackable JBOD JPN2
DS-SL13R-BA	190211-001	StrgWrks 4354 Rackable JBOD US
DS-SL13R-BB	190211-B31	StrgWrks 4354 Rackable JBOD INTL
DS-SL13R-BJ	190211-291	StrgWrks 4354 Rackable JBOD JPN2
DS-SL13T-AA	190210-001	StrgWrks 4314 Tower JBOD US
DS-SL13T-AB	190210-B31	StrgWrks 4314 Tower JBOD INTL
DS-SL13T-AJ	190210-291	StrgWrks 4314 Tower JBOD JPN2
3R-A4075-AA ⁸	302969-B21	MSA30 S-B ALL
3R-A4076-AA ⁸	302970-B21	MSA30 D-B ALL
3R-A5476-AA ⁹	359645-B21	MSA30 4Port HPUX/IA64 Linux.JBO

Note: The MSA30 shelves (3R-A4075-AA and 3R-A4076-AA) are not supported in shared bus configurations.

2. The following disk drives have a minimum required firmware version for use in a shared KZPEA SCSI bus configuration:

Bare Drive Part Number	Model Number (Product ID)	Minimum Firmware Revision
251872-001	BF01865222	B009
251872-002	BF03665223	B009
233806-002	BD0186459A	B011
233806-003	BD0366459B	B011
233806-004	BD0726459C	B011
180732-001	BD009635CB	BDCB
180732-002	BD018635CC	BDCB
180732-003	BD03663622	BDCB
142686-001	BD00962373	BCJG
142689-001	BD01862376	BCJG
153274-001	BD00912578	BCJG
153275-001	BD01812579	BCJG

The following procedures can be used to identify any devices listed above and to verify correct device firmware:

With the drive in hand, look for the model number on the drive label similar to BDxxxxxxx. Reference the above table and note the minimum firmware required if the drive is listed here. Use either of the two methods below to verify the drive's firmware version.

- a) With drive in the system and at the console, type `>>>show device`.
- b) With drive in the system and Tru64 booted, type `#scu -p scan edt show edt`

⁸ MSA30 single-bus and dual-bus direct attach shelves are NOT supported in shared bus configurations

⁹ MSA30 MI (shared bus) shelves are supported on the DS20E and DS25 platforms only.

The console and Tru64 commands shown above will list the Product ID and the drive firmware revision.

- For KZPEA use in GS80/GS160/GS320 AlphaServers (dual-bus shelves only are supported) and for all other AlphaServer platforms with single bus shelves, the KZPEA configurations must not include any disk drives having Arbitration Fairness disabled. Below is a list of known unsupported drives having Arbitration Fairness disabled:

Bare Drive P/N	Model Number (Product ID)	Arbitration Fairness Enabled	Bare Drive P/N	Model Number (Product ID)	Arbitration Fairness Enabled
349536-001	BD00411933	No	142687-001	BD00972374	No
349539-001	BD00421936	No	142689-001	BD01862376	No
349537-001	BD00911934	No	142686-001	BD00962373	No
349540-001	BD00921937	No	127968-001	BC036122C3	No
349541-001	BC01821938	No	127965-001	BD018122C0	No
103600-001	BB00411C48	No	127966-001	BD018222C1	No
103605-001	BB00911C49	No	127962-001	BD009122BA	No
313723-001	BB00921791	No	127963-001	BD009222BB	No
313810-001	BB00421793	No	104921-001	BA03611C9B	No
127893-001	BB018122B7	No	104922-001	BB01811C9C	No
127894-001	BB018222B8	No	388139-001	BB01821AC3	No
127890-001	BB00912301	No	104923-001	BB00911CA0	No
127891-001	BB009222B5	No	388210-001	BB00921B91	No
127980-001	BD018122C9	No	175552-001	BB00913466	No
127981-001	BD018222CA	No	175552-002	BB01813467	No
127977-001	BD009122C6	No	175552-003	BB00923468	No
127978-001	BD009222C7	No	175552-004	BB01823469	No
163587-002	BD01862A67	No	176493-003	BD0366349C	No
163587-005	BD01872A6A	No	176493-002	BD0186349B	No
163587-001	BD00962A66	No	176493-001	BD0096349A	No
163587-004	BD00972A69	No	176493-007	BD036734A5	No
142693-001	BC0367237A	No	176493-006	BD018734A4	No
153275-001	BD01812579	No	176493-005	BD009734A3	No
142690-001	BD01872377	No	188014-001	BF00963643	No
153274-001	BD00912578	No	188014-002	BF01863644	No

The following procedures can be used to identify any unsupported devices listed above:

With the drive in hand, look for the model number on the drive label similar to BDxxxxxxx, and reference the above table. Alternatively, the following procedures can be used to view the model number (Product ID) of devices already installed in the system's configuration.

- a) With drive in the system and at the console, type: >>>show device. With drive in the system and Tru64 booted, type: #scu -p scan edt show edt
- b) With drive in the system and VMS booted, type: > show device /full /page

Note: Users should reference their specific platform's Supported Options List at the following URL for additional information on supported devices.

<http://h18002.www1.hp.com/alphaserver/products/options.html>

Hardware/Firmware Notes

On any XP1000 system the KZPEA-DB module can only be installed in a 64-bit PCI slot.

A video adapter card is recommended to run the on-board configuration utility. On systems such as the HP DS10L, this is not possible since there is only 1 available PCI slot, which precludes the use of a KZPEA board and a video board. On these systems and any others where the choice may be limited to using the serial mode of console operation the following steps are suggested:

At the SRM console prompt, ensure that the console mode of operation is set to "serial." Go into the KZPEA configuration utility by typing "run bios pkx0", where x is the assigned letter of the board's channel A. Once the utility is started and the user has typed control A in response to the board's inquiry as to whether any of the factory settings need to be changed – at this point the terminal's setup mode must be invoked to enable the cursor as the KZPEA configuration utility disables the cursor when it starts running. When the cursor is enabled, exit out of the terminal's setup mode to return to the KZPEA utility and proceed from there.

If your terminal does not present either a flashing cursor or a highlight to indicate where the cursor is, you will not be able to use the serial emulation mode to configure the KZPEA module. Therefore, you must have a video board installed in your system or you must configure the KZPEA in another system and then install it in your system.

Note: KZPEA modules have a restriction with certain graphics modules:

Restricted Graphics ¹⁰ :	Non-Restricted Graphics:
SN-DEPVZ-AA	SN-PBXGB-AA
SN-DEPVD-AA	SN-PBXGD-AD ¹¹
	SN-PBXGD-AE ¹²
	SN-PBXGK-BB ¹³
	SN-PBXGF-AB ¹³
	3X-PBXGG-AA

Refer to the *KZPEA User Guide* regarding the board's SCSI configuration options and their settings.

¹⁰ PCI buses containing any restricted graphics modules are limited to one KZPEA adapter on that PCI bus.

¹¹ On systems with an SN-PBXGD-AD (PowerStorm 300) Video Adapter installed, the printed circuit board (which has part number 54-25563-01) must be at a minimum revision of C06 in order for the KZPEA to be installed on the same PCI bus.

¹² On systems with an SN-PBXGD-AE (PowerStorm 350) Video Adapter installed, the printed circuit board (which is part number 54-25561-01) must be at a minimum revision of B05 in order for the KZPEA to be installed on the same PCI bus. There is an alternate printed circuit board used for this video adapter (which is part number 54-25561-02) and it must be at a minimum revision of A03 in order for the KZPEA to be installed on the same PCI bus.

¹³ These two graphics adapters are in the restricted column if you are using a version of the SRM console that is earlier than 6.0.

SRM Console Notes

Installations that use version 6.0 or earlier of the SRM console must use the “set pk*0_host_id” feature under SRM as well as setting the host SCSI ID under the “run bios pk*0” feature of the system. These actions are required to change the SCSI ID of a port on the KZPEA board.

Version 6.1 and later of the SRM console will only support using the “run bios pk *0” method of setting the host SCSI ID on the KZPEA board. If you attempt to use the “set pk*0_host_id” feature under SRM console version 6.1 the following message will appear:

“Protected from attempted operation”

Software Notes

The minimum acceptable version of Compaq Analyze is 4.0.

The driver for Tru64 UNIX currently does not do domain validation on warm swaps. Domain validation is only performed during boot time and is performed to ensure that the SCSI bus speed negotiated with the device can be executed without data corruption or bus errors. If an error or corruption occurs during domain validation the speed of the SCSI bus will be decreased until no errors are detected.

Disk warm swaps will force a negotiation with the device that may result in an increase or decrease in SCSI bus transfer speed, depending on the device. A problem would occur using the KZPEA controller if you were using a SCSI-2 storage shelf with SCSI-2 devices and then warm swapped a SCSI-2 device with an ULTRA-160 device. Both the adapter and device would negotiate for the ULTRA-160 speed on a SCSI-2 storage shelf. The subsequent transfers could result in data corruption.

Caution must be used when performing warm swaps to ensure that the hardware (adapter, storage shelf, cables, and device) supports the negotiated SCSI bus transfer speed.

Installation in a Tru64 UNIX TruCluster Server Environment

Information on a cluster installation, including existing clusters, can be found in the TruCluster Server documentation set at: http://www.tru64unix.compaq.com/docs/pub_page/cluster_list.html

Shared Bus Support

Installation in a Shared SCSI Bus Configuration

The KZPEA is supported in a 2 node shared SCSI bus configuration. This configuration requires the SCSI ID of each channel used in a shared bus on one of the KZPEA adapters to be changed from the default ID 7 to ID 6. There are three possible shared bus configurations (A, B and C).

***Note:** Configuration A is **OBSOLETE** and not recommended for new installations. Configurations B and C are recommended for new installations and upgrades to existing environments.*

Configuration A

Configuration A (Figure 1) requires the use of Y-cables at each node with one adapter being in the middle of the bus. The on-board termination of both adapters in both nodes must be **disabled** for each channel used in a shared bus configuration. Termination is disabled by removing jumper J5 for SCSI Channel 1/A and jumper J3 for SCSI Channel 2/B, and also setting the Host Adapter SCSI Termination to “Low OFF/High OFF” for Channel 1/A and “Disabled” for Channel 2/B with the SCSI Configuration Utility.

Refer to the *KZPEA User Guide* regarding operation of the adapter’s onboard SCSI Configuration Utility.

Note: For shared bus configuration only, please disregard the “SCSI Termination” paragraph under section 2.1.2 of the KZPEA User Guide which states that the adapter can only be located at the end of the bus, requiring jumpers J3 and J5 to be installed.

Termination will be supplied by the storage enclosure at one end of the bus and by an external terminator at the other end of the bus.

Note: When configuring the KZPEA in a shared SCSI bus configuration which will contain a boot, cluster, quorum, or dump disk, you must connect the shared cable to Channel A of the KZPEA adapters on both nodes if using an SRM Console Revision less than V6.6. Console Revisions of V6.6 and greater do not have this restriction.

Required Components for Shared SCSI Bus Support (per shared bus) for Configuration A

<u>2-5-2 P/N</u>	<u>Qty.</u>	<u>Description</u>
3X-BN55A-01 (Rev B01)	2	Y-Cable P/N: 17-05144-01, and black Connector Plug P/N: 12-10015-01
3X-H32CT-AA	1	External LVD Ultra 160 Terminator P/N: 12-56536-01

Note: Included in the 3X-BN55A-01 Y-cable kit is an HD68 SCSI black connector plug (P/N: 12-10015-01) that **MUST** be installed in the internal SCSI connector of the KZPEA for proper shared bus operation. If only one of the two channels are to be used in a shared bus configuration make sure that the connector plug is attached to the correct internal SCSI connector associated with that bus for each KZPEA adapter.

SCSI Cabling Considerations for Shared Bus Support with Configuration A

The maximum LVD bus length for KZPEA shared SCSI bus support is 12 meters (39 feet). This includes the combined length of the two y-cables and the two SCSI cables as well as KZPEA and shelf internal bus lengths. The y-cables are 0.7 meters each. The following cables are supported in the shared bus configuration:

<u>2-5-2 P/N</u>	<u>6-3 P/N</u>	<u>Cable P/N</u>	<u>Description</u>
3X-BC56J-02	341174-B21	313374-001	6 foot VHDCI-to-VHDCI
3X-BC56J-03	341175-B21	313374-002	12 foot VHDCI-to-VHDCI
3X-BC56J-04	164604-B21	313374-004	24 foot VHDCI-to-VHDCI

The maximum allowable SCSI bus length for this configuration is achieved by using a 6 foot 313374-001 cable and a 24 foot 313374-004 cable.

Figure 1 is an example of a Configuration A KZPEA shared SCSI bus configuration.

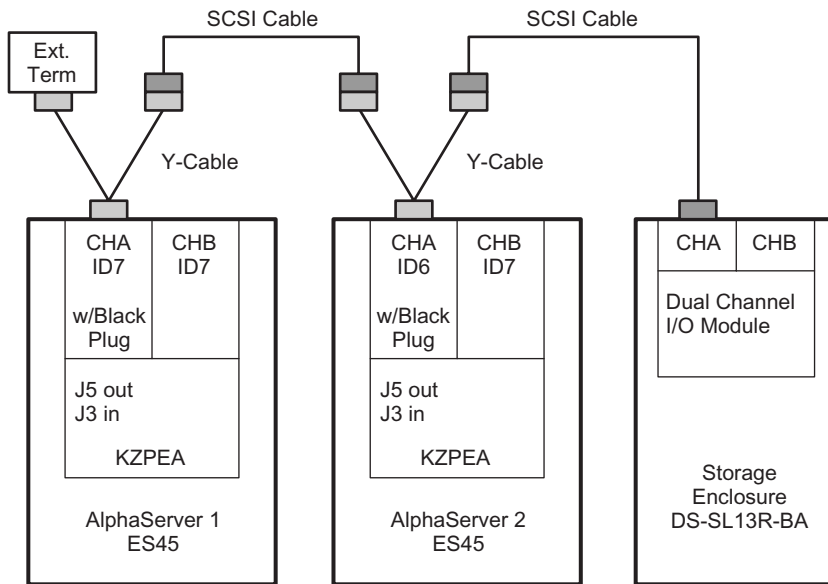


Figure 1 Configuration A KZPEA, Shared SCSI Bus

Configuration B

Configuration B (Figure 2) requires the use of a Tri-link at the middle node, use of a terminator cable between the middle and end node with one adapter being in the middle of the bus. The on-board termination of both adapters in both nodes must be **disabled** for each channel used in a shared bus configuration. Termination is disabled by removing jumper J5 for SCSI Channel 1/A and jumper J3 for SCSI Channel 2/B, and also setting the Host Adapter SCSI Termination to “Low OFF/High OFF” for Channel 1/A and “Disabled” for Channel 2/B with the SCSI Configuration Utility.

Refer to the *KZPEA User’s Guide* regarding operation of the adapter’s onboard SCSI Configuration Utility.

Note: For shared bus configuration only, please disregard the “SCSI Termination” paragraph under section 2.1.2 of the *KZPEA User Guide* which states that the adapter can only be located at the end of the bus, requiring jumpers J3 and J5 to be installed.

Termination will be supplied by the storage enclosure at one end of the bus and by a terminator cable at the other end of the bus.

Note: When configuring the KZPEA in a shared SCSI bus configuration which will contain a boot, cluster, quorum, or dump disk, you must connect the shared cable to Channel A of the KZPEA adapters on both nodes if using an SRM Console Revision less than V6.6. Console Revisions of V6.6 and greater do not have this restriction.

Required Components for Shared SCSI Bus Support (per shared bus) for Configuration B

<u>2-5-2 P/N</u>	<u>Qty.</u>	<u>Description</u>
3X-H8411-AA	1	Shared SCSI adapter kit (12-44100-03 Tri-link and 2 Connector Plugs P/N: 12-10015-01)
3X-BN56A-03	A/R	3M TERM SCSI CABLE
3X-BN56A-04	A/R	4M TERM SCSI CABLE

Note: Included in the 3X-H8411-AA adapter kit are two HD68 SCSI black connector plugs (P/N: 12-10015-01) that *MUST* be installed on the internal SCSI connector of the KZPEA option for proper shared bus operation. If only one of the two channels is to be used in a shared bus configuration make sure that the connector plug is attached to the correct internal SCSI connector associated with that bus for each KZPEA adapter.

Note: The DS15 system external SCSI port utilizes a different Tri-link (3X-H8411-BA kit w/one 12-44100-04 Tri-link)

SCSI Cabling Considerations for Shared Bus Support with Configuration B

The maximum LVD bus length for KZPEA shared SCSI bus support is 12 meters (39 feet). This includes the combined length of the two SCSI cables (signal cable to the storage shelf and terminator cable between nodes) as well as KZPEA and shelf internal bus lengths. The following cables are supported in the shared bus configuration:

Signal cables between the mid-node and the storage shelf:

<u>2-5-2 P/N</u>	<u>6-3 P/N</u>	<u>Cable P/N</u>	<u>Description</u>
3X-BC56J-02	341174-B21	313374-001	6 foot VHDCI-to-VHDCI
3X-BC56J-03	341175-B21	313374-002	12 foot VHDCI-to-VHDCI
3X-BC56J-04	164604-B21	313374-004	24 foot VHDCI-to-VHDCI

Terminator cables between the system mid-node and the system end-node:

<u>2-5-2 P/N</u>	<u>Description</u>
3X-BN56A-03	3M TERM SCSI CABLE
3X-BN56A-04	4M TERM SCSI CABLE

The maximum allowable SCSI bus length for this configuration is achieved by using a 4M terminator cable 3X-BN56A-04 and a 24 foot 313374-004 cable.

Figure 2 is an example of a Config B supported KZPEA shared SCSI bus configuration.

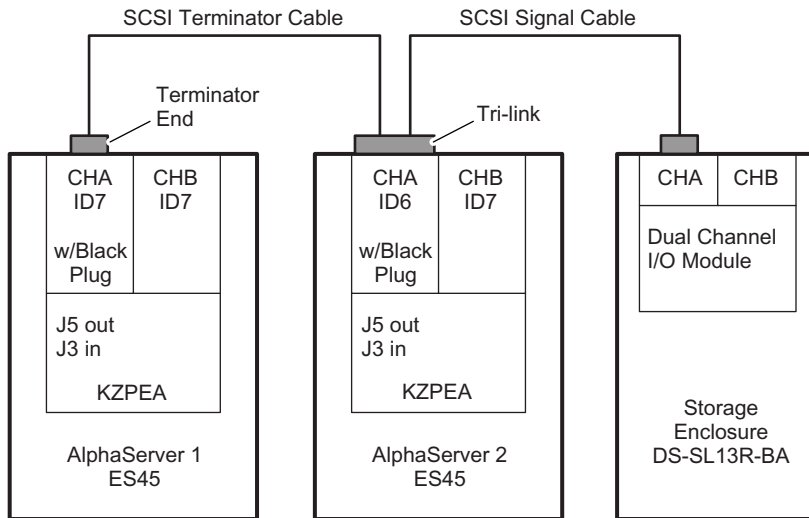


Figure 2 Configuration B KZPEA, Shared SCSI Bus

Configuration C

Configuration C (Figure 3) requires the use of a Multi-initiator shelf (MSA30 MI) as well as standard SCSI signal cables between each host and the shelf. The on-board termination of both adapters in both nodes must be **enabled** for each channel used in a shared bus configuration. Termination is enabled by installing jumper J5 for SCSI Channel 1/A and jumper J3 for SCSI Channel 2/B. The BIOS settings **must be as follows**: Host Adapter SCSI Termination to “Low OFF/High OFF” for Channel 1/A and “Disabled” for Channel 2/B with the SCSI Configuration Utility.

Refer to the *KZPEA User’s Guide* regarding operation of the adapter’s onboard SCSI Configuration Utility.

Termination will be supplied by the storage enclosure at one end of the bus and by the SCSI KZPEA adapter at the other end of the bus.

Note: Configuration C requires a minimum SRM Console Revision of V6.6, Tru64 UNIX v5.1B w/pk4 (5.1B-2/TCR V5.1B-2)

Required Components for Shared SCSI Bus Support (per shared bus) for Configuration C

<u>2-5-2 P/N</u>	<u>Qty.</u>	<u>Description</u>
3X-H8511-AA	1	JUMPER PLUG KIT FOR MSA30 MULTINITATOR (4 white 12-10061-01 CONNECTORS)

Note: Included in the 3X-H8511-AA adapter kit are four HD68 SCSI white connector plugs (P/N: 12-10061-01) that **MUST** be installed on the internal SCSI connector of the KZPEA option for proper shared bus operation. If only one of the two channels is to be used in a shared bus configuration make sure that the connector plug is attached to the correct internal SCSI connector associated with that bus for each KZPEA adapter.

SCSI Cabling Considerations for Shared Bus Support with Configuration C

The following cables are supported in this shared bus configuration:

Signal cables between the nodes and the storage shelf:

<u>2-5-2 P/N</u>	<u>6-3 P/N</u>	<u>Cable P/N</u>	<u>Description</u>
3X-BC56J-02	341174-B21	313374-001	6 foot VHDCI-to-VHDCI
3X-BC56J-03	341175-B21	313374-002	12 foot VHDCI-to-VHDCI
3X-BC56J-04	164604-B21	313374-004	24 foot VHDCI-to-VHDCI

Figure 3 is an example of a Configuration C supported KZPEA shared SCSI bus configuration.

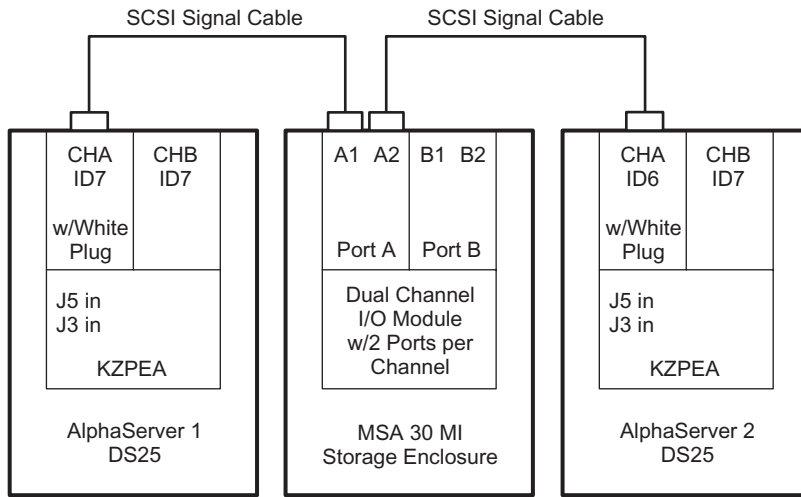


Figure 3 Configuration C KZPEA, Shared SCSI Bus

Note: Shelf Plugs can be interchanged i.e., A1 and A2 can be reversed if desired.

KZPEA Adapter Configuration for Shared SCSI Bus Installation

Configurations A and B

The following steps describe the procedure to disable on-board termination, and also to change one of the adapter's SCSI ID to 6.

Refer to the system and KZPEA User's Guides for proper system shutdown, power off and ESD protections.

1) Disconnect any attached cables and **remove** the on board termination jumper for the bus being configured as a shared bus: J3 for Channel 2/B and J5 for Channel 1/A. Refer to the *KZPEA User's Guide* for location of these termination jumpers.

2) Power-up both AlphaServer systems, and at the console prompts perform the following:

- Type "show config" to display the system configuration information.
- Determine the name of the KZPEA adapter: e.g. pkc0, pkd0, etc.
- Type "init" to reinitialize the system prior to using the "run bios" command.
- Type "run bios pkx0" where x is the assigned letter of the board's channel A.
- Press CTRL-A when prompted to run the KZPEA on-board configuration utility.

- 3) Perform the following steps in the configuration utility on both AlphaServer systems:
- a) Select the channel (1/A or 2/B) that will be configured in a shared bus environment.
 - b) Select "Configure/View Host Adapter Settings" menu.
 - c) Use the arrow key to move the cursor to Host Adapter SCSI Termination, and then press RETURN to select your options.
 - d) Set Host Adapter SCSI Termination = "Low OFF/High OFF" if channel 1/A was selected, or "Disabled" if channel 2/B was selected. [NOTE: B channel has different settings than A channel]
 - e) On one of the shared bus AlphaServer systems, change its KZPEA SCSI ID field to 6 (default is 7) for the appropriate channel being configured into a shared bus environment.
 - f) Press Esc key to get out and save the changes.
 - g) Press Esc key again to exit the configuration utility. The console will reset all I/O buses.

Configuration C

The following steps describe the procedure to enable on-board termination, and also to change one of the adapter's SCSI ID to 6.

Refer to the system and KZPEA User's Guides for proper system shutdown, power off and ESD protections.

1) Disconnect any attached cables and **install** the on board termination jumper for the bus being configured as a shared bus: J3 for Channel 2/B and J5 for Channel 1/A. Refer to the *KZPEA User's Guide* for location of these termination jumpers.

2) Power-up both AlphaServer systems, and at the console prompts perform the following:

- a) Type "show config" to display the system configuration information.
- b) Determine the name of the KZPEA adapter: e.g. pkc0, pkd0, etc.
- c) Type "init" to reinitialize the system prior to using the "run bios" command.
- d) Type "run bios pkx0" where x is the assigned letter of the board's channel A.
- e) Press CTRL-A when prompted to run the KZPEA on-board configuration utility.

3) Perform the following steps in the configuration utility on both AlphaServer systems:

- a) Select the channel (1/A or 2/B) that will be configured in a shared bus environment.
- b) Select "Configure/View Host Adapter Settings" menu.
- c) Use the arrow key to move the cursor to Host Adapter SCSI Termination, and then press RETURN to select your options.
- d) Set Host Adapter SCSI Termination = "Low OFF/High OFF" if channel 1/A was selected, or "Disabled" if channel 2/B was selected. [NOTE: B channel has different settings than A channel]
- e) On one of the shared bus AlphaServer systems, change its KZPEA SCSI ID field to 6 (default is 7) for the appropriate channel being configured into a shared bus environment.
- f) Press Esc key to get out and save the changes.
- g) Press Esc key again to exit the configuration utility. The console will reset all I/O buses.